

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	600	1200	
			km	1000	2000	
			MONTH	1	12	
NOTE	HOURS	20	100	200		
	DRIVETRAIN BOOTS			I	I	182
	FRONT/ REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	134, 137
*	2WD/4WD SELECT SYSTEM				I	—
*	BRAKE FLUID	NOTE 3		I	I	163
*	BRAKE PADS WEAR	NOTE 1, 2			I	167
*	BRAKE LIGHT SWITCH		I	I	I	171
	BRAKE SYSTEM		I	I	I	163
*	REVERSE INHIBITOR SYSTEM		I	I	I	154
	GUARDS			I	I	179
*	SUSPENSION			I	I	160
*	SPARK ARRESTER			C	C	159
*	NUTS, BOLTS, FASTENERS		I		I	—
**	WHEELS/TIRES		I	I	I	172
**	TIE-ROD AND JOINT BOOTS		I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS				I	—
**	STEERING SYSTEM				I	—

- * Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 246).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.