

# If a Fuse Blows


## PS (Electric Power Steering) Fuse Access (TRX420FA6 only)

1. Turn the ignition switch to OFF (O) before checking the fuse.
2. Remove the seat (page 118).
3. Remove the rear fender cover (page 121).
4. To access the PS block fuse (1), remove the PS fuse block cover (2).

If the PS block fuse is blown, see your dealer for this service.

5. Install the PS fuse box cover.
6. Install the rear fender cover.
7. Install the seat.

## UNDER REAR FENDER COVER

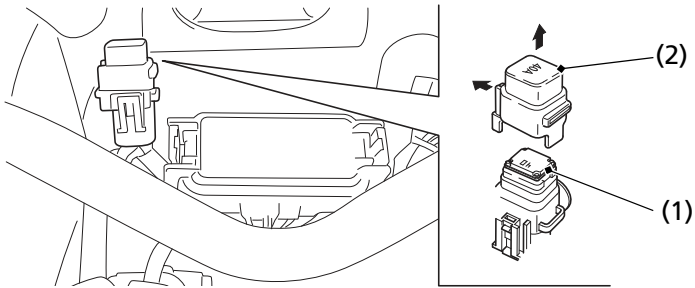

(1) PS fuse

(2) PS fuse block cover