

# Controls & Features

## Ignition Switch

The ignition switch ( 1 ) is used for starting and stopping the engine (page 62 ). Insert the key and turn it to the right for the ON ( I ) position.

The ignition switch is also used to reset the oil change indicator (page 20 ).

Key Position	Function
ON ( I )	Electrical circuits on.
OFF ( O )	No electrical circuits function.

### CENTER OF HANDLEBAR

