

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	MONTH	1	6	12	
		HOURS	20	100	200		
	DRIVETRAIN BOOTS						162
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2 YEARS)		119, 121
*	2WD/4WD SELECT SYSTEM						—
*	BRAKE FLUID	NOTE 3					144
*	BRAKE PADS WEAR	NOTE 1,2					146
*	BRAKE LIGHT SWITCH						150
	BRAKE SYSTEM						143
*	REVERSE LOCK SYSTEM						137
	GUARDS						158
	SCRAPER	NOTE 2					161
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	142
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						—
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 226).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.