

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
			mi	100	600		1200
			km	150	1000		2000
			MONTH	1	6		12
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS			I	I	179	
	FRONT and REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	129, 132	
	REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	129	
*	2WD/4WD SELECT SYSTEM				I	—	
*	BRAKE FLUID	NOTE 3		I	I	159	
*	BRAKE SHOES WEAR	NOTE 1, 2			I	167	
*	BRAKE PADS WEAR	NOTE 1, 2			I	162	
*	BRAKE LIGHT SWITCH		I	I	I	168	
	BRAKE SYSTEM		I	I	I	159	
*	REVERSE LOCK SYSTEM GUARDS		I	I	I	150, 177	
*	CLUTCH SYSTEM		I	I	I	149	
*	SUSPENSION			I	I	156	
*	SPARK ARRESTER			C	C	155	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	170	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.