

Operation Component Locations


rear brake lever/
parking brake lever

headlight dimmer switch

P/R lever

headlight switch

front brake lever

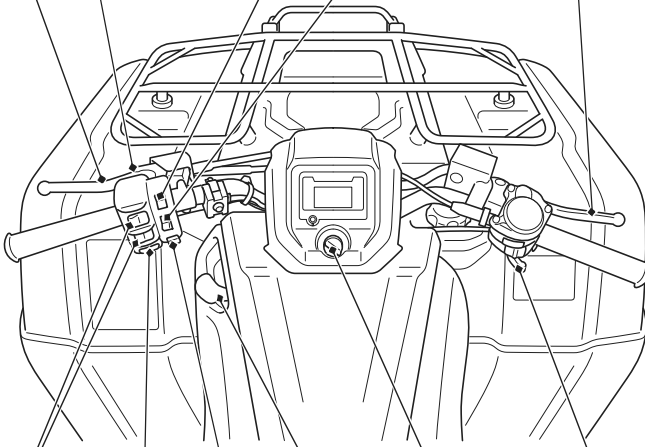

gearshift
switches

start button

throttle lever

engine stop switch

ignition switch

2WD/4WD select lever
(Except TRX420TE1)