

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page	
			mi	100	600	1200				
			km	150	1000	2000				
			MONTH	1	6	12				
	NOTE	HOURS	20	100	200					
*	FUEL LINE					I		—		
*	THROTTLE OPERATION					I		149		
	AIR CLEANER	(NOTE 1)			C	C		143		
	AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I		148		
	SPARK PLUG					I	I	152		
*	VALVE CLEARANCE				I	I	I	155		
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			122		
	ENGINE OIL FILTER				REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			127		
*	ENGINE IDLE SPEED				I	I	I	—		
*	EVAPORATIVE EMISSION CONTROL SYSTEM (For AC type)	(NOTE 4)			I: EVERY 2 YEARS			—		
	RADIATOR COOLANT	(NOTE 3)				I	I	136		
*	COOLING SYSTEM	(NOTE 2)				I	I	—		

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).