

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | | FREQUENCY | WHICHEVER COMES FIRST | INITIAL MAINT. | | | REGULAR MAINT. INTERVAL | | | Refer to page |
|-------|--------------------------------|-----------|-----------------------|----------------|-----|------|---|---|-----|---------------|
| | | | | mi | 100 | 600 | 1200 | ⇒ | | |
| | | | | km | 150 | 1000 | 2000 | | | |
| | | | | MONTH | 1 | 6 | 12 | | | |
| NOTE | HOURS | 20 | 100 | 200 | | | | | | |
| * | FUEL LINE | | | | | | I | | — | |
| * | THROTTLE OPERATION | | | | | | I | | 149 | |
| | AIR CLEANER | NOTE 1 | | | | | C | C | 143 | |
| | AIR CLEANER HOUSING DRAIN TUBE | NOTE 2 | | | | | I | I | 148 | |
| | SPARK PLUG | | | | | | I | I | 153 | |
| * | VALVE CLEARANCE | | | | | | I | I | 156 | |
| | ENGINE OIL | | | | | | INITIAL= 100 mi (150km), 20 operating hours or 1 month: R | | | 122 |
| | ENGINE OIL FILTER | | | | | | REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R | | | 127 |
| * | ENGINE IDLE SPEED | | | | | | I | I | I | — |
| | RADIATOR COOLANT | NOTE 3 | | | | | I | I | 136 | |
| * | COOLING SYSTEM | NOTE 2 | | | | | I | I | — | |

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).