

# Index

---

## P

|   |     |
|---|-----|
| P/R lever .....                                     | 97  |
| passengers, no carrying .....                       | 53  |
| pavement, no riding on .....                        | 67  |
| pinging, engine .....                               | 119 |
| plug, spark .....                                   | 153 |
| pre-ride inspection .....                           | 55  |
| problems, unexpected .....                          | 204 |
| propeller shaft boots & yoke joint boot .....       | 181 |
| protective apparel .....                            | 50  |
| PS (Electric Power Steering) (TRX420FM2 only) ..... | 47  |

## R

|                                    |        |
|------------------------------------|--------|
| rear final gear oil .....          | 131    |
| recoil starter (Canada only) ..... | 38, 77 |
| removal,                           |        |
| rear fender cover .....            | 117    |
| seat .....                         | 114    |
| tank cover assembly .....          | 115    |
| reverse,                           |        |
| assist cable .....                 | 152    |
| assist lever .....                 | 152    |
| gear, shifting into .....          | 80     |
| indicator .....                    | 14, 17 |
| riding in .....                    | 80     |
| P/R lever .....                    | 41     |
| rider training .....               | 52     |
| Rider's Club Honda .....           | 247    |