

# Instruments & Controls

---

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations .....	11
Indicators & Displays .....	14
Multi-function Display (Except TRX420TM1).....	20
Speed and Mileage Unit Changing (Except TRX420TM1).....	23
4WD Indicator (Except TRX420TM1) .....	23
Gear Position Indicator (Except TRX420TM1).....	24
Fuel Gauge (Except TRX420TM1) .....	25
Digital Clock (Except TRX420TM1) .....	27
Odometer (Except TRX420TM1) .....	28
Tripmeter (Except TRX420TM1).....	28
Coolant Temperature Gauge (Except TRX420TM1) .....	29
Hourmeter (Except TRX420TM1).....	31
Maintenance Tripmeter & Maintenance Hourmeter (Except TRX420TM1).....	32

(cont'd)