


# Coolant

---

## RIGHT FRONT

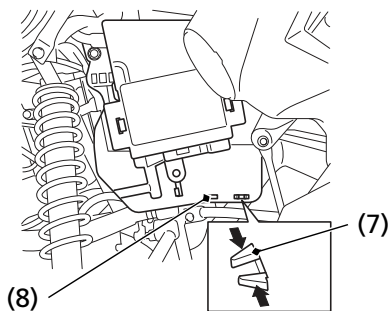


(7) tab A

(8) tab B

7. Remove the center radiator grill cover (10) by unhooking the right side of the center radiator grill cover hook (11).
8. Wash the radiator core (12) and center radiator grill cover.

## LEFT FRONT

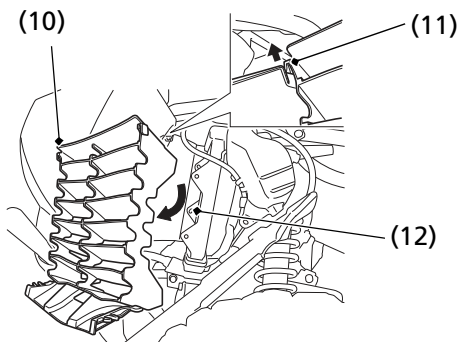

(10) center radiator  
grill cover

(11) center radiator grill cover hook  
(12) radiator core

9. Install the removed parts in reverse order of removal.