

# Engine Oil & Filter

---

## Checking & Adding Oil


Refer to *Safety Precautions* on page 89 .

Check the engine oil level each day before operating your ATV and add if needed.

*Before riding your ATV, check the engine oil level.*

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3–5 minutes. Stop the engine and wait 2–3 minutes.
3. Remove the seat (page 100).
4. Unsnap and remove the left side cover ( 1 ).

### LEFT SIDE

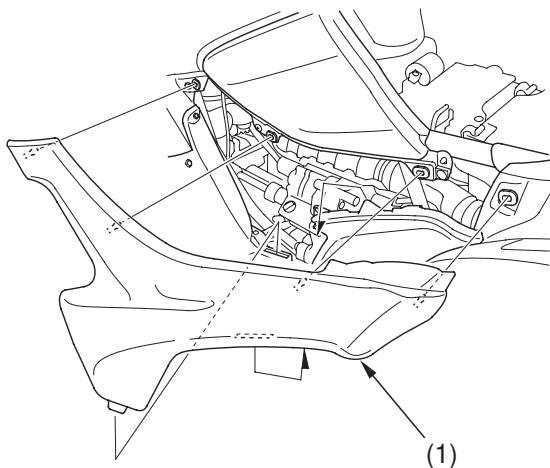

(1) left side cover