


# Suspension

## Suspension Spring Pre-Load (Except TRX420TM)

Refer to *Safety Precautions* on page 89 .

FRONT

REAR

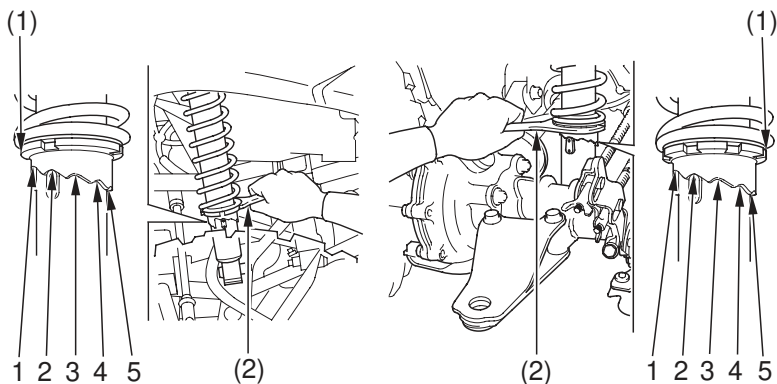

- (1) spring pre-load adjuster
- (2) pin spanner

The spring pre-load adjuster ( 1 ) has 5 positions for different load or riding conditions.

Use the pin spanner ( 2 ) to adjust the shock spring pre-load.