

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
	DRIVE CHAIN	NOTE 1,2		I,L	I,L EVERY 300 mi (500 km) or 50 operating hours		147
	DRIVE CHAIN SLIDER				I	I	149
*	BRAKE FLUID	NOTE 3			I	I	129
*	BRAKE PADS WEAR	NOTE 1,2				I	133
*	BRAKE LIGHT SWITCH			I	I	I	136
	BRAKE SYSTEM GUARDS			I	I	I	129
	CLUTCH SYSTEM			I	I	I	146
*	CLUTCH SYSTEM			I	I	I	112
*	SUSPENSION				I	I	123
*	SPARK ARRESTER				C	C	121
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	—
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARING					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 210).

** In the interest of safety, we recommend these items be serviced only by your dealer.