

# Transmission Oil

---

## Add Transmission Oil:

5. Reinstall the oil drain bolt with the new sealing washer and tighten it to the specified torque:  
**16 lbf·ft (22 N·m , 2.2 kgf·m)**
6. Fill the crankcase with the recommended grade oil approximately:  
**0.72 US qt (0.68 ℓ)**
7. Reinstall the transmission oil fill cap.
8. Start the engine and let it idle for 3–5 minutes. Stop the engine, wait 2–3 minutes to allow the oil to properly distribute itself in the clutch and transmission. Check the transmission oil level by following the steps in *Checking & Adding Transmission Oil* (see page 97).
9. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.