


# Coolant

4. Remove the radiator grill (6) from the frame.
5. Wash the radiator grill and radiator core (7).

## NOTICE

*High pressure water (or air) can damage the radiator core.*

### LEFT SIDE

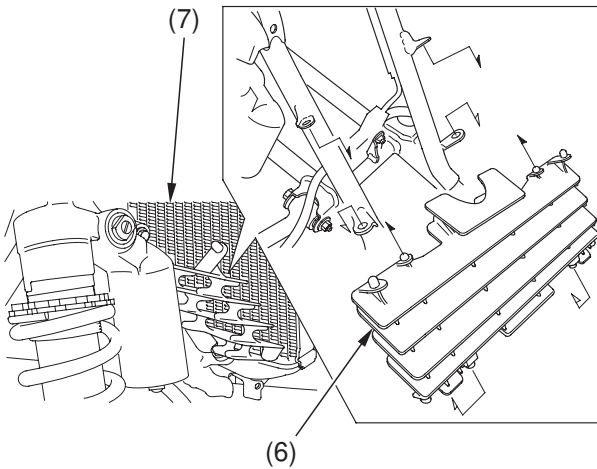

(6) radiator grill

(7) radiator core

6. Install the radiator grill, right and left shrouds and steering cover in the reverse order of removal.