


# Battery

---

The battery is located in a compartment under the left rear fender.

LEFT SIDE

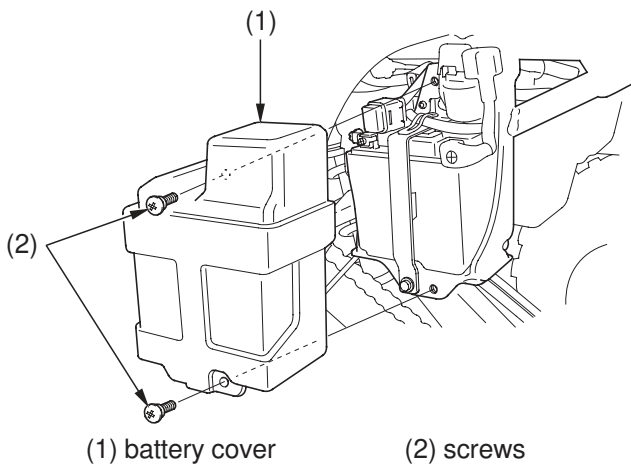

## Removal

1. Make sure the ignition switch is OFF (  $\circ$  ).
2. Remove the battery cover ( 1 ) by removing the screws ( 2 ).