

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇨	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
			mi	100	600		1200
			km	150	1000		2000
			MONTH	1	6		12
NOTE	HOURS	20	100	200			
	DRIVE CHAIN	NOTE 1, 2	I, L	I, L EVERY 300 mi (500 km) or 50 operating hours		147	
	DRIVE CHAIN SLIDER			I	I	149	
*	BRAKE FLUID	NOTE 3		I	I	129	
*	BRAKE PADS WEAR	NOTE 1, 2			I	133	
*	BRAKE LIGHT SWITCH		I	I	I	136	
	BRAKE SYSTEM		I	I	I	129	
	GUARDS			I	I	146	
*	CLUTCH SYSTEM		I	I	I	112	
*	SUSPENSION			I	I	123	
*	SPARK ARRESTER			C	C	121	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	—	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 210).

** In the interest of safety, we recommend these items be serviced only by your dealer.