

Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on [page 73](#).

Your ATV's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

NOTICE

Using the wrong oil filter may result in leaks or engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench, as well as a means for disposing of the drained fluid ([page 174](#)). If you do not have the skills or the tools, see your dealer.

Drain the Engine Oil:

1. Start the engine in a well-ventilated area and let it idle for 3 – 5 minutes. Stop the engine and wait 2 – 3 minutes.
2. With the ATV on level ground, remove the engine oil fill cap from the left side of the crankcase cover.
3. Place an oil drain pan under the crankcase and remove the engine oil drain bolt (1) and sealing washer (2).

UNDER ENGINE



(1) engine oil drain bolt

(2) sealing washer