

Indicators & Controls

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations	10
Indicators	13
High Coolant Temperature Indicator.....	13
Neutral Indicator.....	14
Controls & Features	15
Fuel Valve.....	15
Choke Knob	16
Ignition Switch.....	17
Start Button.....	18
Engine Stop Switch.....	19
Headlight Switch	20
Headlight Dimmer Switch	20
Throttle Lever	21
Clutch Lever/Parking Brake Lever	21
Front Brake Lever.....	22
Rear Brake Pedal.....	22
Parking Brake	23
Flag Pole Bracket	24