


# Air Cleaner

## Cleaning

### UNDER SEAT

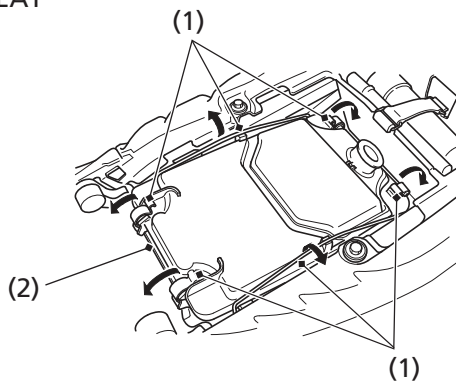

(1) retainer clips

(2) air cleaner housing cover

1. Remove the seat ([page 84](#)).
2. Unlatch the retainer clips (1).
3. Remove the air cleaner housing cover (2).

(cont'd)