

Storing Your Honda

11. Inflate the tires to their recommended pressures ([page 140](#)).
12. Store your ATV in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
13. Place your ATV on blocks to lift all tires off the floor.
14. Cover your ATV with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

NOTICE

Do not store your ATV in an upright position for extended periods of time. The ATV should be stored with all four tires on the ground. Gasoline could clog the fuel tank vent check valve and cause damage to your ATV.

Removal from Storage

Refer to *Safety Precautions* on [page 73](#).

1. Uncover and clean your ATV.
2. If your ATV has been stored for more than four months — change the engine oil ([page 92](#)) and transmission oil ([page 98](#)). Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
3. If your ATV has been stored for more than two months — ask your dealer to drain and replace the fuel.
4. Lubricate the drive chain ([page 152](#)).
5. Charge the battery ([page 158](#)) as required. Install the battery.
6. Perform a pre-ride inspection ([page 31](#)), then test-ride your ATV at low speeds.