

# Indicators & Displays


---

## Display Check

When the ignition switch is turned on, the multi-function display (1) will temporarily show all the modes and digital segments and initial message. So you can make sure the liquid crystal display is functioning properly.

The displays are identified in the table on [page 18](#) with the words: *Display Check*.

If any part of these displays does not come on when it should, have your dealer check for problems.

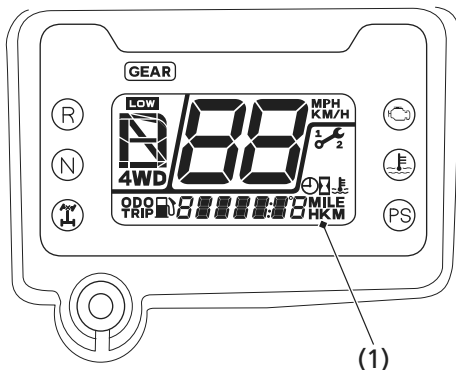

(1) multi-function display

## Meter Input Signal Failure

If the neutral indicator, reverse indicator, differential lock indicator, PGM-FI indicator, high coolant temperature indicator stay on and the gear position indicator “-” and coolant temperature gauge “C - - - - - H” blink, have your dealer check for problems.