

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	I	
			km	150	1000	2000		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I	—	
*	THROTTLE OPERATION					I	165	
	AIR CLEANER	NOTE 1			C	C	159	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	164	
	SPARK PLUG				I	I	168	
*	VALVE CLEARANCE			I	I	I	171	
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			137	
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			143	
*	ENGINE IDLE SPEED			I	I	I	—	
	RADIATOR COOLANT	NOTE 3			I	I	151	
*	COOLING SYSTEM	NOTE 2			I	I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual ([page 258](#)).