


If a Fuse Blows

PS (Electric Power Steering) Fuse Access (TRX500FA6/FA7)

1. Turn the ignition switch to OFF (O) before checking the fuse.
2. Remove the seat ([page 130](#)).
3. Remove the rear fender cover ([page 131](#)).
4. To access the PS fuse (1), remove the PS fuse box cover (2).
If the PS fuse is blown, install the spare fuse ([page 129](#)).
5. Install the PS fuse box cover.
6. Install the rear fender cover.
7. Install the seat.

UNDER REAR FENDER COVER

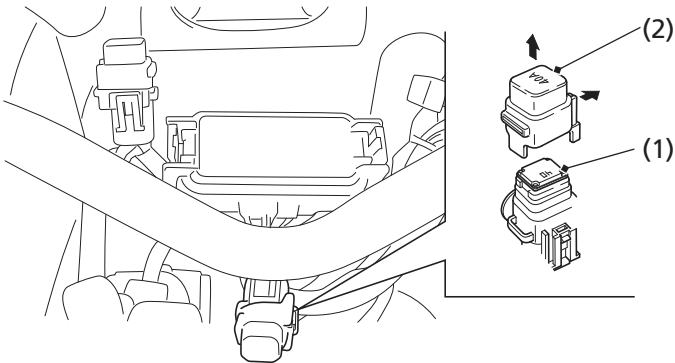

(1) PS fuse

(2) PS fuse box cover