


Coolant

- Remove the clips.
- Remove the left radiator grill cover (5) by releasing the tab A (6), tab B (7), tab C (8), hook A (9) and hook B (10).

LEFT FRONT

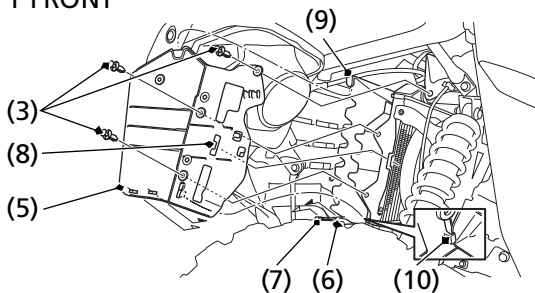


- | | | |
|-------------------------------|------------|-------------|
| (3) clips | (7) tab B | (10) hook B |
| (5) left radiator grill cover | (8) tab C | |
| (6) tab A | (9) hook A | |

7. TRX500FA5 only:

Remove the right radiator grill cover (11) by releasing the tab A, tab B, tab C, hook A, hook B and hose (12), then remove the center radiator grill cover (13).

RIGHT FRONT (TRX500FA5)

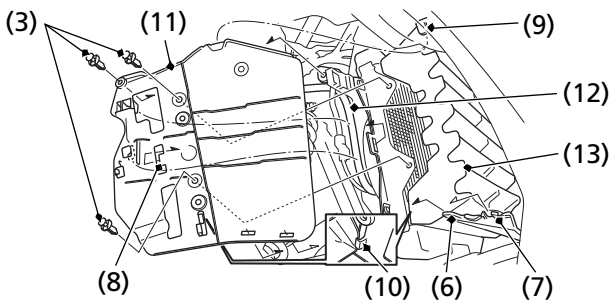

- | | |
|---------------------------------|----------------------------------|
| (11) right radiator grill cover | (13) center radiator grill cover |
| (12) hose | |

(cont'd)