

# Rear Final Gear Oil

---

1. Park your ATV on a firm, level surface.
2. Place an oil drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), O-ring (3), drain bolt and sealing washer (4).
4. After the oil has completely drained, reinstall the drain bolt with a new sealing washer and tighten it to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 214).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

(cont'd)