


# Coolant

- Remove the clips.
- Remove the left radiator grill cover (5) by releasing the tab A (6), tab B (7), tab C (8), hook A (9) and hook B (10).

## LEFT FRONT

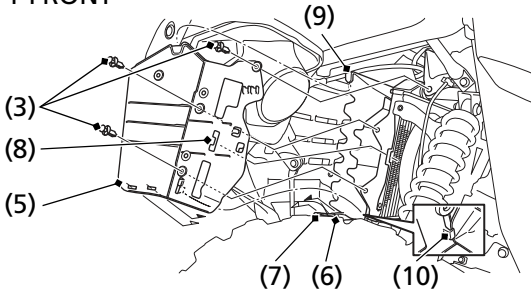


- (3) clips (7) tab B (10) hook B  
(5) left radiator grill cover (8) tab C  
(6) tab A (9) hook A

## 7. TRX500FA5 only:

Remove the right radiator grill cover (11) by releasing the tab A, tab B, tab C, hook A, hook B and hose (12), then remove the center radiator grill cover (13).

## RIGHT FRONT (TRX500FA5)

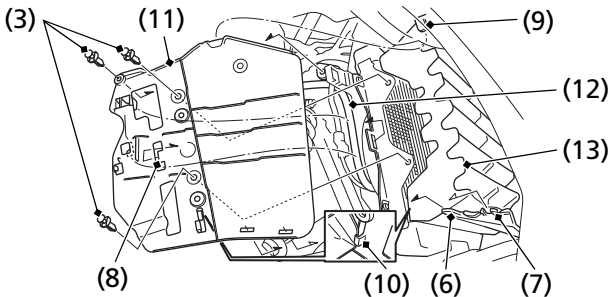

- (11) right radiator grill cover (13) center radiator grill cover  
(12) hose

(cont'd)