

# Indicators & Displays

---

## Gear Position Indicator

The gear position indicator (1) shows the gear position when the ignition switch is in the ON (I) position.


AUTO (automatic shift mode)

The indicator displays N for neutral, R for reverse, and D for drive.

ESP (manual shift mode)

The indicator displays N for neutral, R for reverse, and 1 – 5 for the five forward gears.

“–” will be displayed on the gear position indicator when the transmission is not shifted into gear properly. Before riding, check that the gear position is properly displayed on the gear position indicator.

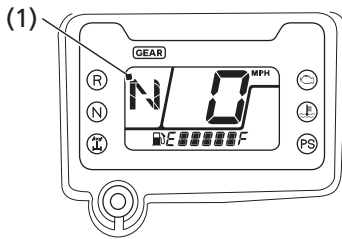

(1) gear position indicator

If the gear position indicator shows “–” or blinks, turn the ignition switch to the OFF (O) position, and then turn it back to the ON (I) position again. If the gear position indicator still shows “–”, check that the range select lever is securely in a gear, rock the vehicle back and forth. Make sure the gear position is properly displayed in the gear position indicator, if the gear position indicator still shows “–” or blinks, see your dealer.