

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
		MONTH	1	6	12		
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS			I	I	193	
	FRONT/REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	146, 149	
*	RANGE SELECT SYSTEM				I	—	
*	BRAKE FLUID	NOTE 3		I	I	176	
*	BRAKE PADS WEAR	NOTE 1, 2			I	180	
*	BRAKE LIGHT SWITCH		I	I	I	184	
	BRAKE SYSTEM		I	I	I	176	
*	REVERSE INHIBITOR SYSTEM		I	I	I	167	
	GUARDS			I	I	192	
*	SUSPENSION			I	I	173	
*	SPARK ARRESTER			C	C	172	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	185	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 258).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.