


# If a Fuse Blows

---

All of the electrical circuits on your ATV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse (1).

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

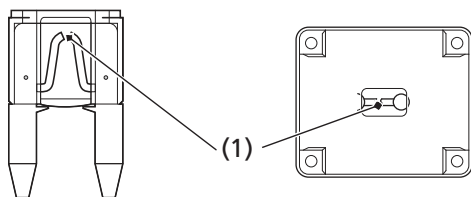

(1) blown fuse

The main fuse and the circuit fuses are located under the rear fender cover.

## TRX500FA6/FA7:

The EPS (Electric Power Steering) fuse is located under the rear fender cover.

### Recommended Fuses

main fuse 1	40 A
main fuse 2	10 A
ES (shift motor) fuse	30 A
other fuses	20 A x 3, 10 A
EPS (Electric Power Steering) fuse (TRX500FA6/FA7)	40 A