












Quick Reference

These symbols are used in Controls & Features section:

| SYMBOL | COMPONENT | SEE PAGE |
|--|--|-----------------|
| I | ON — ignition switch | 35 |
| O | OFF — ignition switch | 35 |
| L D | range select lever | 36 |
|  | 4WD switch | 37 |
|  | differential lock switch | 39 |
|  | differential lock indicator — lights when the front differential lock mode engages | 40 |
|  OR | start/override button | 41 |
|  | RUN — engine stop switch | 42 |
|  | OFF — engine stop switch | 42 |
|  | ON — headlight switch | 43 |
| • | OFF — headlight switch | 43 |
|  | HI — headlight dimmer switch | 43 |
|  | LO — headlight dimmer switch | 43 |
| AUTO | automatic shift mode — drive mode select switch | 46 |
| ESP | manual shift mode — drive mode select switch | 46 |
|  | upshift switch — gearshift switch | 47 |
|  | downshift switch — gearshift switch | 47 |
| P _R | Parking Brake/Reverse Lever (P/R Lever): P — parking brake R — riding in reverse | 49 |