

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 226).

For information about carburetor adjustment for riding at high altitude, see page 227.

Safe Riding Precautions	65
Off-road Use Only	65
Keep Hands and Feet on Controls	66
Control Speed	67
Use Care on Unfamiliar or Rough Terrain	68
Do Not Perform Stunts	69
Starting & Stopping the Engine	70
Preparation	70
Starting Procedure	71
Flooded Engine	73
Stalled Engine	73
How to Stop the Engine	74
Using the Recoil Starter	75
Shifting Gears	76
Riding in Reverse	83

(cont'd)