


Shifting Gears


Two gearshift switches are located next to the left handlebar grip: upshift (⬆) and downshift (⬇).

To upshift the transmission, press the upshift switch (4) once.
To downshift the transmission, press the downshift switch (5) once.

UPSHIFTING SEQUENCE

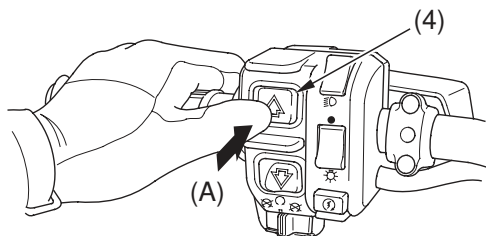

DOWNSHIFTING SEQUENCE

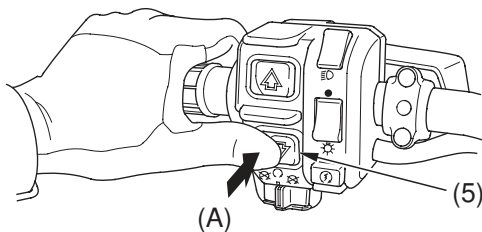

(4) upshift switch
(5) downshift switch

(A) press