

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇨	INITIAL		REGULAR		Refer to page
			MAINT.	MAINT. INTERVAL	MAINT.	INTERVAL	
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	143
*	CARBURETOR CHOKE					I	145
	AIR CLEANER	NOTE 1				C C	137
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I I	142
	SPARK PLUG					I	147
*	VALVE CLEARANCE			I		I I	150
	ENGINE OIL		INITIAL=	100 mi (150 km), 20 operating hours or 1 month: R			120
	ENGINE OIL FILTER		REGULAR=	Every 600 mi (1,000 km), 100 operating hours or 12 months: R			125
*	ENGINE IDLE SPEED			I		I I	146
	RADIATOR COOLANT	NOTE 3				I I	133
*	COOLING SYSTEM	NOTE 2				I I	—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 236).