

If the Transmission Is Not Functioning Properly

Manual Shift (ESP) Mode:

If one or both shift switches do not function, stop riding your ATV in the ESP mode. Switch to riding in the automatic shift mode.

Have your ATV inspected and repaired by your dealer.

Automatic Shift (AUTO) Mode:

When the automatic transmission is not shifting properly, the gear position indicator will show “- -” and blink.

See your dealer to check and restore the automatic transmission.

If the gear position indicator shows “- -” and blinks while riding, perform the following:

1. Stop the ATV.
2. Turn the ignition switch to the OFF (O) position.
3. After the engine stops, turn the ignition switch to the ON (I) position.
4. Check the gear position indicator.

When the “- -” is blinking on the gear position indicator:

Restart the engine; drive the vehicle to a location where it can be loaded and transported to your dealer.

When the display on the gear position indicator returns to normal:

You may drive the vehicle as usual after restarting the engine.

However, we urge you to have your ATV inspected by your dealer.