


# Indicators & Displays

## Speed and Mileage Unit Changing

The speedometer, odometer, tripmeter, and maintenance tripmeter show in either “MPH” and “MILE” or “KM/H” and “KM”.

To change the speed and mileage units, press and hold the mode select button (1) for more than 5 seconds in the odometer mode ([page 21](#)) with the ATV stopped.

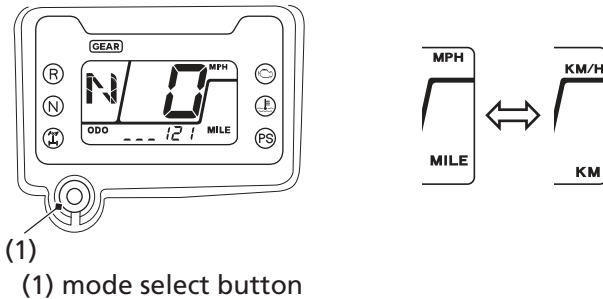

## 4WD Indicator

The 4WD indicator (1) shows when the 4WD mode engages ([page 35](#)).

