

Controls & Features


Ignition Switch

The ignition switch (1) is used for starting and stopping the engine ([page 80](#)). Insert the key and turn it to the right for the ON (q) position.

The ignition switch is also used to reset the maintenance tripmeter/maintenance hourmeter ([page 33](#)).

Key Position	Function
ON (q)	Electrical circuits on.
OFF (w)	No electrical circuits function.

CENTER OF HANDLEBAR

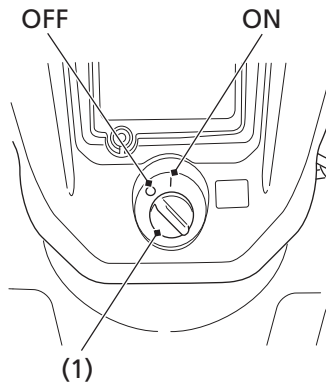

(1) ignition switch

q ON
w OFF