

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
			NOTE	HOURS	20			100
*	FUEL LINE				I	—		
*	THROTTLE OPERATION				I	157		
	AIR CLEANER	NOTE 1			C C	151		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I I	156		
	SPARK PLUG				I I	161		
*	VALVE CLEARANCE			I	I I	164		
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			129	
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			134	
*	ENGINE IDLE SPEED			I	I I	—		
	RADIATOR COOLANT	NOTE 3			I I	143		
*	COOLING SYSTEM	NOTE 2			I I	—		

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 252).