

# Coolant

---

## Coolant Replacement

Refer to *Safety Precautions* on [page 111](#).

Coolant should be replaced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual ([page 252](#)).

### 3 WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

To properly dispose of drained coolant, refer to *You & the Environment*, [page 210](#).

#### NOTICE

*Improper disposal of drained fluids is harmful to the environment.*