


# Coolant

---

To clean the radiator core and radiator grill plate:

1. Remove the radiator cap lid ([page 145](#)).
2. Remove the reserve tank (1) by removing the bolt (2) and clips (3) ([page 125](#)).
3. Release the hoses (4) from the guides.
4. Hold the reserve tank being careful not to spill the coolant.

LEFT FRONT

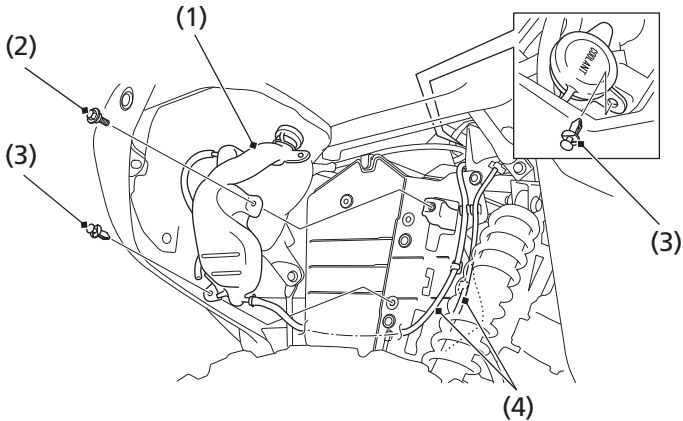

(1) reserve tank

(2) bolt

(3) clips

(4) hoses