


If a Fuse Blows

Main Fuses Access

1. To prevent an accidental short circuit, turn the ignition switch to OFF (w) before checking or replacing the fuses.
2. Remove the seat ([page 122](#)).
3. Remove the rear fender cover ([page 123](#)).
4. To access the main fuse 1 (2), remove the fuse cover (3).
5. To access the main fuse 2 (4), remove the fuse box cover (5).

UNDER REAR FENDER COVER

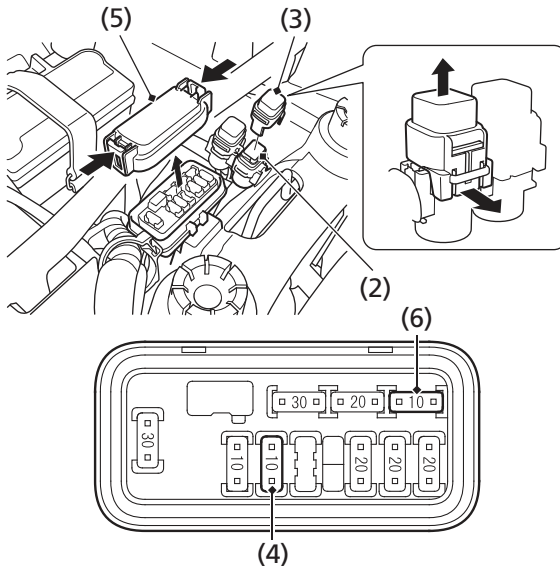

(2) main fuse 1

(3) fuse cover

(4) main fuse 2

(5) fuse box cover

(6) spare fuse

6. Pull the main fuses out.

If the main fuse 1 is blown, see your dealer for this service.

If the main fuse 2 is blown, install the spare fuse (6).

7. Install the fuse cover.

(cont'd)