

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page
			mi	100	600	1200	⇒		
			km	150	1000	2000			
			MONTH	1	6	12			
NOTE	HOURS	20	100	200					
*	FUEL LINE						I	—	
*	THROTTLE OPERATION						I	157	
	AIR CLEANER	NOTE 1				C	C	151	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	156	
	SPARK PLUG					I	I	161	
*	VALVE CLEARANCE				I	I	I	164	
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R				129	
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R				134	
*	ENGINE IDLE SPEED				I	I	I	—	
	RADIATOR COOLANT	NOTE 3				I	I	143	
*	COOLING SYSTEM	NOTE 2				I	I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 252).