


Controls & Features

Headlight Switch

y t

LEFT HANDLEBAR

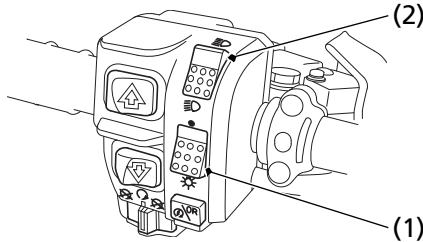

- | | |
|-----------------------------|-------|
| (1) headlight switch | y ON |
| | t OFF |
| (2) headlight dimmer switch | u HI |
| | i LO |

The headlight switch (1) is used to turn the headlights and assist headlight ON (y) or OFF (t). To operate, turn the switch to ON (y) or OFF (t).

Headlight Dimmer Switch

u i

The headlight dimmer switch (2) is used to change between the high and low beams of the headlight and to activate the assist headlight. To operate, turn the switch to HI (u) for high beam of the headlight and activate the assist headlight, LO (i) for low beam of the headlight and deactivate the assist headlight.