

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL	REGULAR		Refer to page
			MAINT.	MAINT. INTERVAL		
			mi	100	600	
		km	150	1000	2000	
MONTH	1	6	12			
NOTE	HOURS	20	100	200		
	DRIVETRAIN BOOTS			I	I	191
	FRONT/REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	140, 143
*	BRAKE FLUID	NOTE 3		I	I	171
*	BRAKE SHOES WEAR	NOTE 1, 2			I	179
*	BRAKE PADS WEAR	NOTE 1, 2			I	174
*	BRAKE LIGHT SWITCH		I	I	I	180
	BRAKE SYSTEM		I	I	I	171
*	REVERSE LOCK SYSTEM GUARDS		I	I	I	162
				I	I	189
*	CLUTCH SYSTEM		I	I	I	161
*	SUSPENSION			I	I	168
*	SPARK ARRESTER			C	C	167
*	NUTS, BOLTS, FASTENERS		I		I	—
**	WHEELS/TIRES		I	I	I	182
**	TIE-ROD AND JOINT BOOTS		I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS				I	—
**	STEERING SYSTEM				I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 254).

** In the interest of safety, we recommend these items be serviced only by your dealer.