

# Indicators & Displays


Reset the maintenance tripmeter/maintenance hourmeter after maintenances.

To reset the maintenance tripmeter/maintenance hourmeter, proceed as follows:

Press and hold the mode select button (5) and turn the ignition switch (6) to ON (I). The maintenance minder indicator will appear, then it will blink twice, and the multi-function display will temporarily show all the modes and digital segments. The indicator message will disappear.

Reset operation will be cancelled, if the mode select button is released before the indicator blinks twice.

If the maintenance is done before the setting interval, be sure to reset the meters after the maintenance.

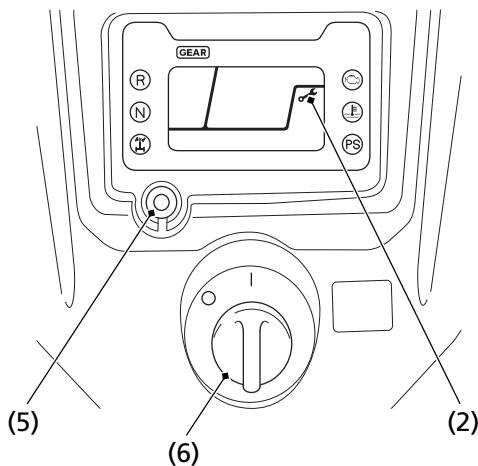

(2) maintenance minder indicator

(5) mode select button  
(6) ignition switch