


# If a Fuse Blows

---

## *Circuit Fuses Access*

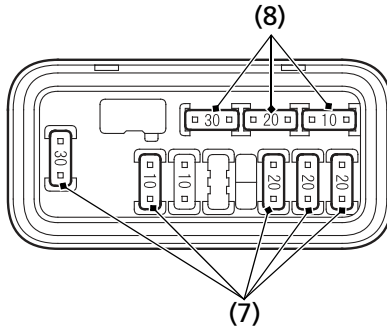

(7) circuit fuses

(8) spare fuses

8. To check or replace a circuit fuse (7), pull the old fuse out of its retaining clips.  
If the fuse is blown, replace it with a spare fuse (8) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### **NOTICE**

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

9. Install the fuse box cover.  
10. Install the rear fender cover.  
11. Install the seat.