


# Indicators & Displays

## Odometer

The odometer (1) registers total distance traveled in mileage while the ignition switch is ON (I) with the "ODO" mark (2). The odometer locks at 999999 when the readout exceeds 999999.

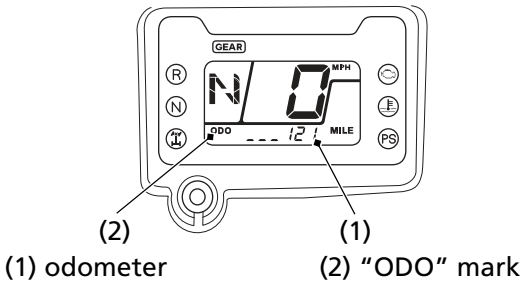

## Tripmeter

The tripmeter (1) shows mileage per trip since you last reset the tripmeter while the ignition switch is ON (I) with the "TRIP" mark (2). The tripmeter returns to 0.0 when the readout exceeds 999.9. To reset the tripmeter to zero, press the mode select button (3) and hold it in for at least 2 seconds in the tripmeter mode.

