

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page	
				mi	100	600	1200				
				km	150	1000	2000				
				MONTH	1	6	12				
		NOTE	HOURS	20	100	200					
*	FUEL LINE						I		—		
*	THROTTLE OPERATION						I		155		
	AIR CLEANER	NOTE 1				C	C		149		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I		154		
	SPARK PLUG					I	I	I	159		
*	VALVE CLEARANCE				I	I	I		162		
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R				127		
	ENGINE OIL FILTER				REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R				132		
*	ENGINE IDLE SPEED				I	I	I		—		
	RADIATOR COOLANT	NOTE 3				I	I		141		
*	COOLING SYSTEM	NOTE 2				I	I		—		

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 248).