

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I		—
*	THROTTLE OPERATION					I		155
	AIR CLEANER	NOTE 1				C	C	149
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	154
	SPARK PLUG					I	I	159
*	VALVE CLEARANCE				I	I	I	162
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			127
	ENGINE OIL FILTER				REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			132
*	ENGINE IDLE SPEED				I	I	I	—
	RADIATOR COOLANT	NOTE 3				I	I	141
*	COOLING SYSTEM	NOTE 2				I	I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 248).